


Model

G7800/M/E2

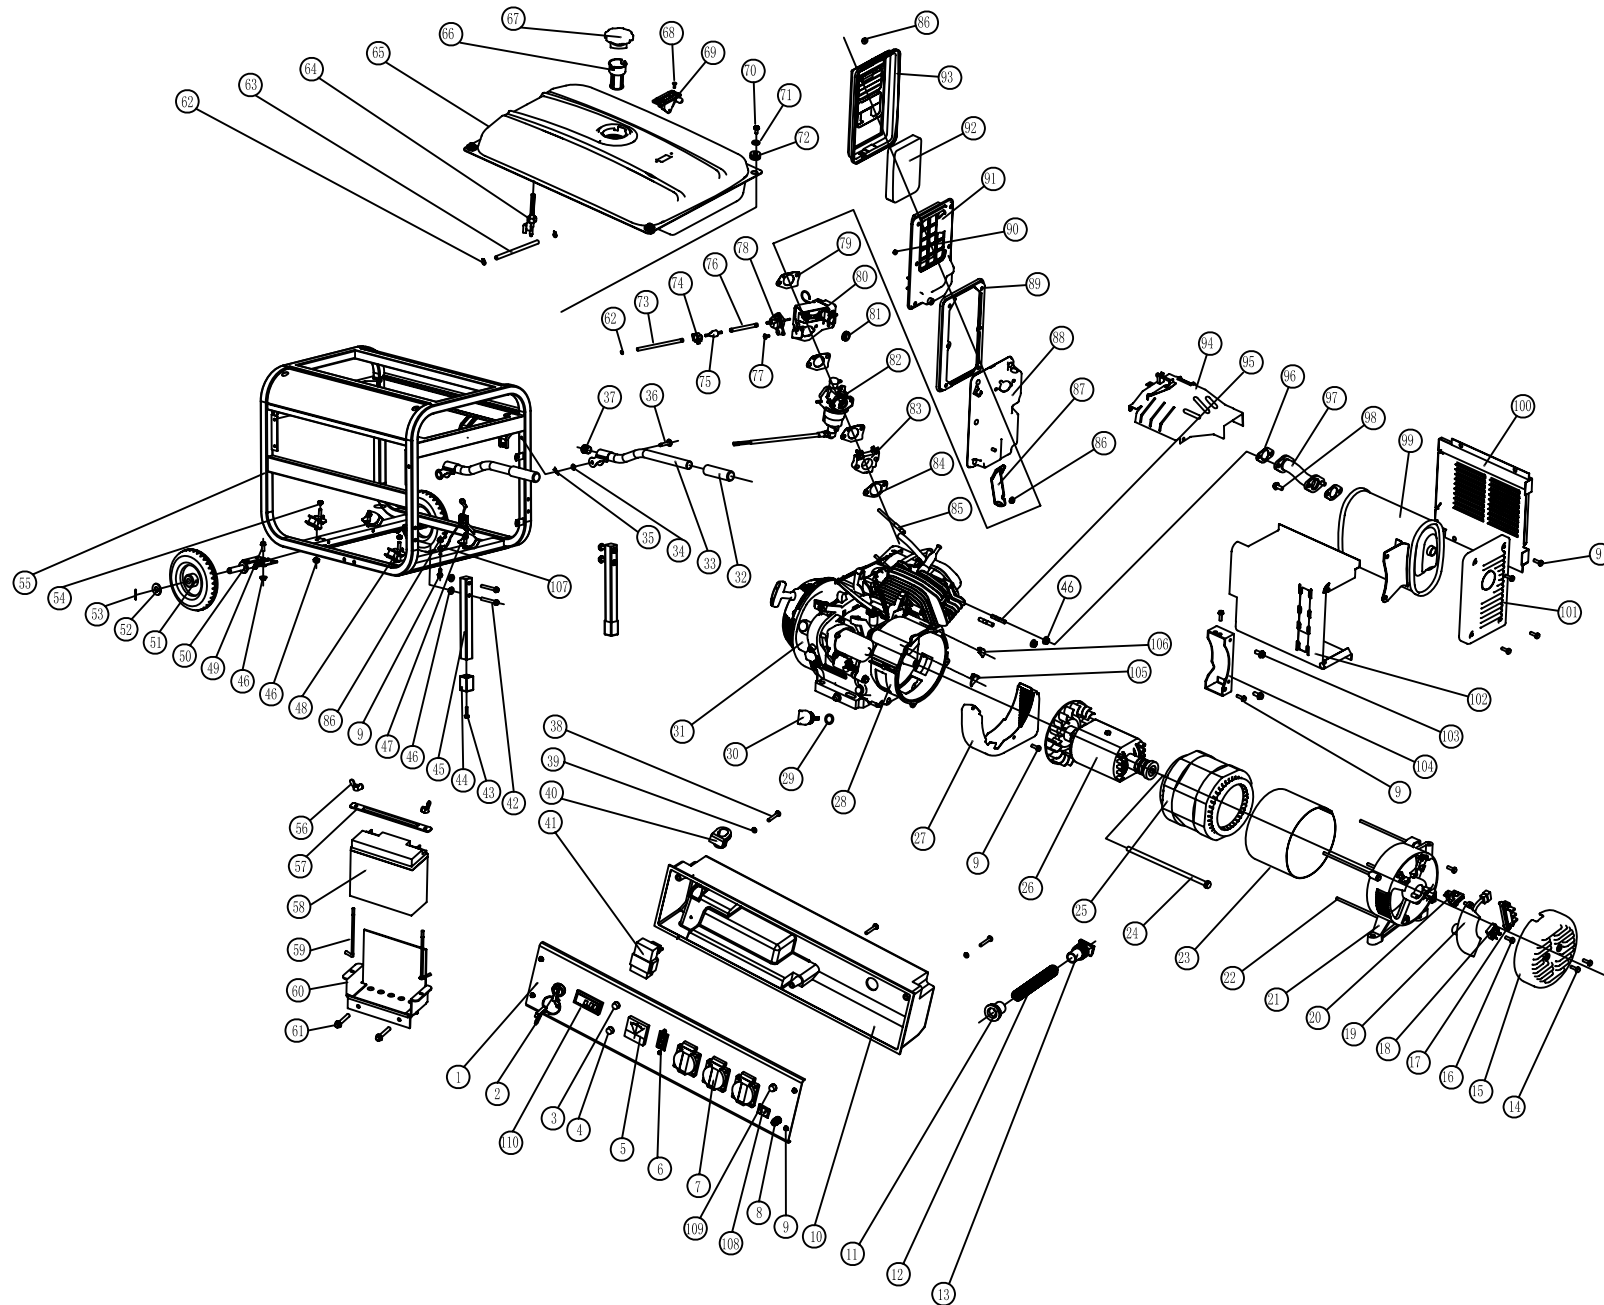

Gasoline Generator Parts List

Model G7800/M/E₂

Ref · No.	Part No.	Description		Qt y.	Note
1	SF188FD-1710000	Control panel	□□	1	
2	SF02FD-1151205A	Electric starting switch	□□□□□□□□	1	
3	SF02FD-1151201A	AC indicator lamp	□□□□	1	
4	SF02FD-1151207D	Oil alarm indicator lamp	□□□□□□	1	
5	SF02FD-1151204A	Voltmeter	□□□□	1	
6	SF05FD-1151202	A.C circuit breaker	AC □□□□□□	1	
7	SF02FD-1151203	Receptacle	□□□□	3	
8	GB5781-86	Screw M6×22	□□□□□□□	1	
9	GB5789-86	Screw M6×12	□□M6x12	14	
10	SF05FD-1151207A	Control box	□□□□□	1	
11	SF02FD-1151201	Wiring rubber bush	□□□□□□	1	
12	SF05FD-1151209C	Wiring protecting hose	□□□□	1	
13	SF05FD-1170003-B	Wiring rubber bush	□□□□□□□□□□	1	
14	GB5789-86	Screw M5×10	□□M5×10	2	
15	SF05FD-1152002	Rear cover	□□□□□	1	
16	GB5789-86	Screw M6×10	□□M6×10	7	
17	SF168F-1152032	Terminal	□□□□	1	
18	SF168F-1152004A	Bridge rectifier	□□	1	
19	SF05FD-1152031A	AVR	AVR	1	
20	SF05FD-1152035	Alternator brush	□□	1	
21	SF05FD-1152032	Alternator rear frame	□□□□	1	
22	GB5789-86	Screw M6×179	□□M6×179	4	
23	SF05FD-1152001	Stator protector	□□□□□	1	
24	GB5787-88	Screw M10×1.25×265	□□M10×1.25×265	1	
25	SF05FD-1152020	Stator	□□□□□	1	
26	SF05FD-1152010	Rotor	□□□□□	1	
27	SF05FD-1151600	Alternator air outlet shroud	□□□□□□□□	1	
28	SF188FD-1030011	Crankcase cover	□□□□□	1	
29	SF1P60F-1030004	O-ring oil seal	□□□□O□□□□□	1	
30	SF188F-1030003	Oil gauge	□□□□	1	
31	SF188FD-100000E	Engine	SFE390E□□□□	1	
32	SF188FD-1741002-C	Handle sleeve	□□□□	2	
33	SF188FD-1151104I	Handle	□□	2	
34	SF188F-1110005	Flat washer	□□□□□	2	
35	SF188F-1110007	Cotter pin	□□□□	2	
36	SF188FD-1151102I	Pin	□□□□	2	
37	SF188FD-1151105I	Handle plug	□□□□□	2	
38	GB822-88	Screw M6×40	□□M6×40	3	
39	GB97.1-85	Washer Φ6	□□Φ6	3	
40	SF05FD-1151206	Rubber bush	□□□□□□	1	

Gasoline Generator Parts List

Model G7800/M/E2


Ref · No.	Part No.	Description	Qt y.	Note
41	SF05FD-1719000	Diode	□□□□□□□	1
42	GB5789-86	Screw M8×68	□□M8X68	1
43	GB5789-86	Screw M6×29	□□ M6X29	1
44	SF168FD-1151104F	Vibration absorber	□□□	3
45	SF188FD-1151103I	Supporter	□□□□	3
46	GB6177-86	Nut M8	□□M8	1
47	SF05FD-1151300A	Vibration absorber 1	□□□□	1
48	SF05FD-1151300B	Vibration absorber 2	□□□□	1
49	GB5789-86	Screw M8×20	□□ M8X20	1
50	SF188FD-1151108G	Axle	□□□	1
51	SF188FD-1151109G	Wheel	10□□□	2
52	GB97.1-85 φ14	Flat washer	□□	1
53	GB/T91-2000	Cotter Pin	□□□φ3.2X40	1
54	GB6177-86	Nut M10	□□M10	1
55	SF188FD-1151101I	Steel frame assembly	□□□□□□	2
56	GB62-88	Butterfly nut M6	□□□□M6	2
57	SF188FD-1700210-C	Battery fixing plate	□□□□□	2
58	FM12180	Battery	□□□	4
59	SF188FD-1700203-C	Hook bolt M6	□□□□M6	8
60	SF188FD-1700200-C	Battery support	□□□□□	2
61	GB5789-86	Screw M8×50	□□M8×50	2
62	SF160F-1070001	Fuel hose clip	□□□□□	2
63	SF188FD-1160002	Fuel hose	□□□	2
64	SF168FD-1160400	Fuel cock	□□□	2
65	SF188FD-1160001	Fuel tank	□□	2
66	SF168F-1160500	Fuel filter	□□□	1
67	SF168FD-1160200	Fuel tank cap	□□□	1
68	GB819-85	Screw M5×6	□□M5×6	1
69	SF168FD-1160100	Fuel meter	□□□□□	1
70	GB5789-86	Screw M6×25	□□M6×25	1
71	GB5287-86	Washer Φ6	□□Φ6	1
72	SF188FD-1160300-C	Rubber bush	□□□	1
73	SF188FD-1131001	Rubber hose	□□□□	1
74	SF188FD-1131015	Clip	□□	1
75	SF188FD-1131100	One-way valve	□□□□□□□□	1
76	SF188FD-1131002	Rubber hose	□□□□	1
77	GB818-85	Screw M5×10	□□M5×10	1
78	SF188FD-1031200	Diaphragm valve assembly	□□□□□	1
79	SF188FD-1130002	Air cleaner gasket	□□□□□□1□	3
80	SF188FD-1131000	Choke assembly	□□□□□□	1

Gasoline Generator Parts List

Model G7800/M/E2

Ref No.	Part No.	Description		Qty.	Note
81	SF188F-1020001	Rubber bush	□□□□□□□□	1	
82	SF188FD-1133000	carburetor	□□□□	1	
83	SF188FD-1134000	Carburetor connector	□□□□□□□□	1	
84	SF188FD-1130003	Connector gasket	□□□□□□□□	1	
85	SF188FD-1010002	Intake bolt	□□□□□□□□	2	
86	GB6177-86	Nut M6	□□M6	4	
87	SF188FD-1090006	Air cleaner support	□□□□□□	1	
88	SF188FD-1090100	Air cleaner rear seat	□□□□□□□□	1	Air cleaner assembly
89	SF188FD-1090002	Air cleaner seal	□□□□	1	
90	GB6177-86	Nut M5	□□M5	6	
91	SF188FD-1090003	Separating plate	□□□□	1	
92	SF188FD-1090004	Air cleaner element	□□□□	1	
93	SF188FD-1090200	Air cleaner cover	□□□□□□□□	1	
94	SF188FD-1080200	Air shroud	□□□□□□	1	
95	SF188FD-1010001	Exhaust bolt	□□□□□□□□	2	
96	SF188FD-1100001	Exhaust gasket	□□□□□□	2	
97	SF188FD-1100100	Exhaust pipe	□□□□□□□□	1	
98	GB5781-86	Screw M8×25	□□M8×25	2	
99	SF188FD-1100002	Muffler	□□□□	1	Muffle rassembly
100	SF188FD-1100105	Muffler outer protector	□□□□	1	
101	SF188FD-1100104	Muffler side protector	□□□□	1	
102	SF188FD-1100103	Muffler inner protector	□□□□	1	
103	GB5789-86	Screw M8×20	□□M8×20	5	
104	SF188FD-1100005	Muffler support	□□□□□□□□	1	
105	SF05-1201100A	Stopple	□□□□□□□□□□	1	
106	SF05-1201100B	Stopple	□□□□□□□□□□	1	
107	SF168FD-11511013G	connecting wire	□□□□□□	1	
108	SF168FD-1710004A	DC socket	DC□□□□	1	
109	SF02FD-1151202A-R	DC circuit breaker	DC□□□□□□	1	
110	SF168FD-1710007	Running time counter	□□□□□□	1	

Model

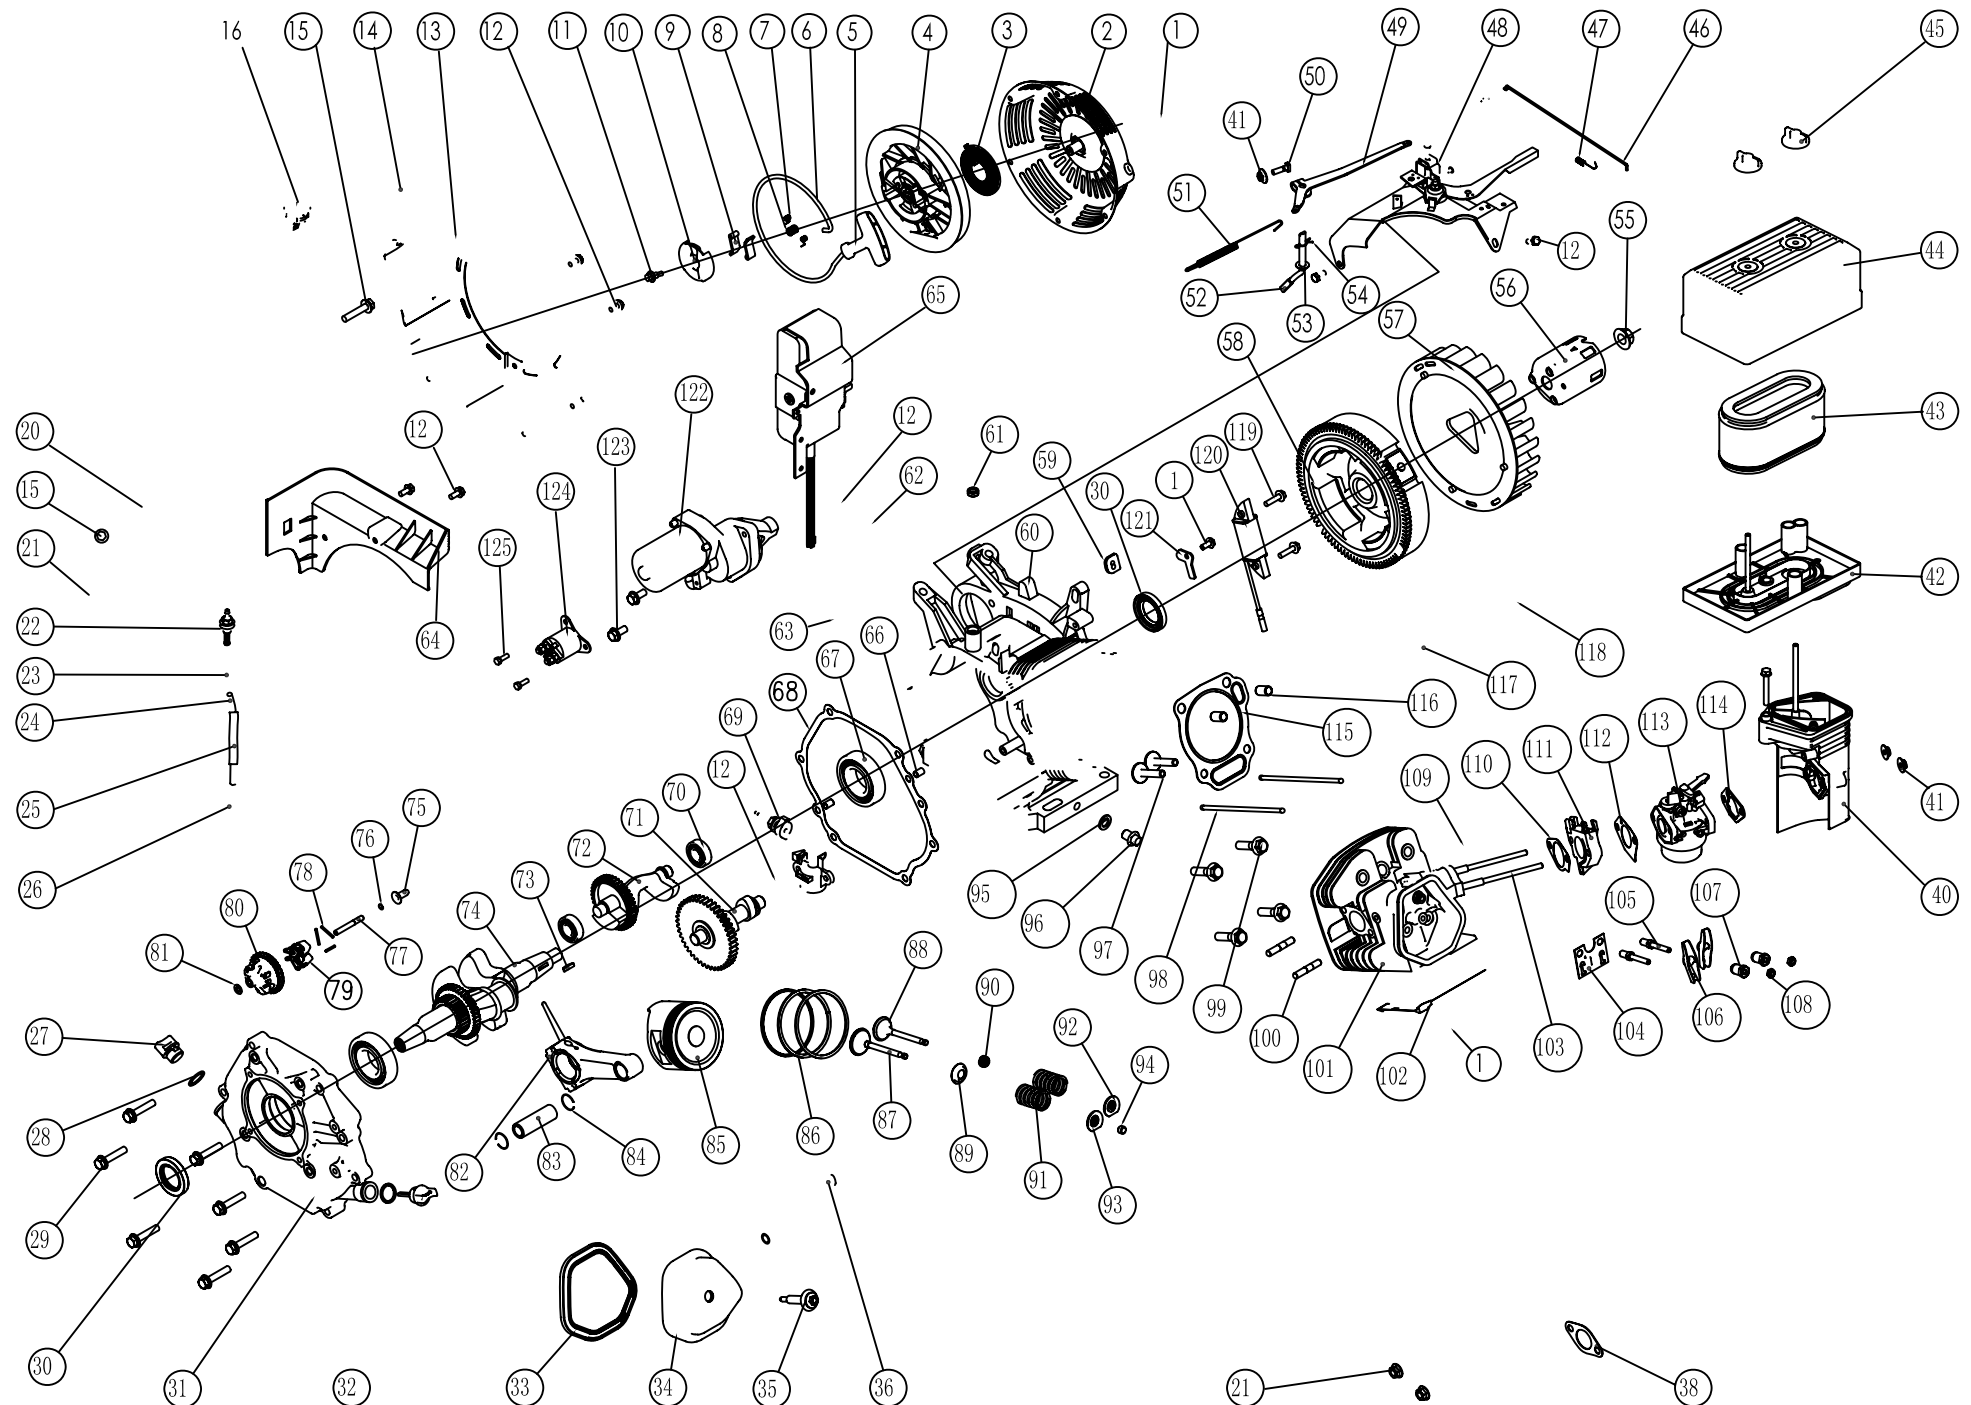

Gasoline
Engine Parts

Ref. No.	Part No.	Description		Qty.	Note
1	GB5789-86	Screw M6x8	□□M6X8	8	
2	SF188F-1060100-C	Recoil starter case	□□□□□□	1	
3	SF188F-1060009	Recoil starter spring	□□□□	1	
4	SF188F-1060008	Drum sheave	□□□	1	
5	SF188F-1061006	Rope handle	□□	1	
6	SF188F-1060007	Rope	□□	1	
7	SF188F-1060006	Pawl spring	□□□□	2	
8	SF188F-1060004	Pawl guide spring	□□□□	1	
9	SF188F-1060005	Pawl	□□	2	
10	SF188F-1060003	Pawl guide	□□	1	
11	SF188F-1060002	Pawl guide Setting screw	□□□□	1	
12	GB5789-86	Screw M6x12	□□M6X12	9	
13	SF188F-1080100-C	Fan case	□□□□□	1	
14	139FMD-1009301	Fan case Rubber plug	□□□□□	1	
15	GB5789-86	Screw M8x28	□□M8X28	2	
16	SF188F-1070200-C	Fuel meter	□□□□□	1	
17	SF160F-1070100	Fuel tank cap	□□□	1	
18	SF160F-1070006	Fuel filter	□□□	1	
19	SF188F-1071000-C	Fuel tank	□□	1	
20	SF188F-1070100-C	Fuel tank support	□□□□□	1	
21	GB6177-86	Nut M8	□□M8	3	
22	SF160F-1070300	Fuel outlet joint	□□□□	1	
23	SF160F-1070001	Fuel hose clip	□□□□□	1	
24	SF188F-1070001	Fuel hose	□□□	1	
25	SF160F-1070003	Fuel hose protector	□□□□□□	1	
26	SF160F-1070001	Fuel hose clip	□□□□□□	1	
27	SF160F-1030005	Oil filling plug	□□□	1	
28	SF160F-1030002	Oil filling plug seal	□□□□□□□□	2	
29	GB5789-86	Screw M8x40	□□M8X40	7	
30	SF188F-1030200	Oil seal	□□□□□□□	2	
31	SF188F-1030011	Crankcase cover	□□□□	1	
32	SF188F-1030003	Oil gauge	□□□	1	
33	SF188F-1020003	Cylinder head cover gasket	□□□□□□	1	
34	SF188F-1020100	Cylinder head cover assembly	□□□□□□	1	
35	SF188F-1020006	Cylinder head cover screw	□□□□□□□□	1	
36	SF188F-1020002	Breather tube	□□□□	1	
37	SF188F-1101000-C	Muffler	□□□□□	1	
38	SF188F-1100100	Exhaust gasket	□□□□□	1	
39	SF188F-1100100-C	Muffler cover	□□□□	1	
40	SF188F-1090500-C	Air cleaner base	□□□□□□□	1	

Gasoline Engine Parts List

.C

Ref No.	Part No.	Description		Qty	Note
41	GB6177-86	Nut M6	□□ M6	3	
42	SF188F-1090300-C	Air cleaner element support	□□□□□□	1	
43	SF188F-1090200-C	Air cleaner element	□□	1	
44	SF188F-1090001-C	Air cleaner cover	□□□□	1	
45	SF188F-1090100-C	Air cleaner cover nut	□□□□□□	2	
46	SF188F-1110002	Carburetor connecting rod	□□□□	1	
47	SF188F-1110001	Carburetor spring	□□□	1	
48	SF188F-1080200-C	Throttle control rack	□□□□□	1	
49	SF188F-1110006	Governing arm	□□□	1	
50	SF160F-1110004	Governing arm screw	□□□□□	1	
51	SF188F-1110004	Governing spring	□□□□	1	
52	SF188F-1110003	Governing shaft	□□	1	
53	SF188F-1110005	Governing shaft washer	□□□□	1	
54	SF188F-1110007	Cotter pin	□□□	1	
55	SF188F-1050006	Flywheel nut	□□□□	1	
56	SF188F-1060001	Starting hub	□□□	1	
57	SF188F-1080002	Cooling fan	□□	1	
58	SF188F-1121000	Flywheel	□□□□	1	
59	SF188F-1030012	Wire bush	□□	1	
60	SF190F-1030006	Crankcase	□□□□	1	
61	SF188F-1030100	Governing shaft Oil seal	□□□□□□□	1	
62	SF160F-1126000	Diode	□□□□□	1	
63	SF188F-1030001	Wiring clip	□□	1	
64	SF188F-1120001-C	Plastic cover	□□	1	
65	SF188F-1127000	Control on-off	□□□□□□□	1	
66	139FMD-1003003	Crankcase gasket Dowel pin	□□□□□□□	2	
67	GB/T276-94 6207/C3	Ball bearing	□□	2	
68	SF188F-1030010	Crankcase gasket	□□□□	1	
69	SF188F-1127000	Oil level sensor	□□□□□	1	
70	GB/T276-94	Ball bearing	□□	2	
71	SF188F-1041000	Camshaft assembly	□□□□□	1	
72	SF188F-1050303	Balance shaft	□□□□	1	
73	SF188F-1050304	Crankshaft key	□□□	1	
74	SF188F-1050301	Crankshaft assembly	□□	1	
75	SF188F-1110008	Governing gear shaft Collar	□□□□□□	1	
76	SF160F-1110103	Governing gear shaft circlip	□□□□□□□	1	
77	SF188F-1110009	Governing gear shaft	□□□□□	1	
78	SF188F-1110102	Flyweight pin	□□□□	3	

Gasoline Engine Parts List

Ref · No.	Part No.	Description		Qty ·	Note
79	SF188F-1110103	Flyweight	□□□□	3	
80	SF188F-1110101	Governing gear	□□□□□	1	
81	SF160F-1110106	Governing gear washer	□□□□□□□□	1	
82	SF188F-1050200	Connecting rod assembly	□□□□□	1	
83	SF188F-1050005	Piston pin	□□□□	1	
84	SF188F-1050004	Piston pin circlip	□□□□□□	2	
85	SF190F-1050001	Piston	□□	1	
	SF190F-1050100	Oil ring set	□□□□□□□□	1	
86	SF190F-1050003	Second piston ring	□□□□□□□	1	
	SF190F-1050002	First piston ring	□□□□□□□	1	
87	SF188F-1040011	Exhaust valve	□□□□	1	
88	SF188F-1040003	Intake valve	□□□□	1	
89	SF188F-1040006	Exhaust valve spring washer	□□□□□□□□	1	
90	SF188F-1040004	Intake valve oil seal	□□□□□	1	
91	SF188F-1040007	Valve spring	□□□□□	2	
92	SF188F-1040002	Intake valve spring retainer	□□□□□□	1	
93	SF188F-1040008	Exhaust valve spring retainer	□□□□□□	1	
94	SF188F-1040009	Exhaust valve cap	□□□□□	1	
95	139FMD-1003102	Drain plug washer	□□□□□□□□	2	
96	139FMD-1003101	Drain plug	□□□□□	2	
97	SF188F-1040012	Valve lifter	□□□□□	2	
98	SF188F-1040010	Push rod	□□	2	
99	SF188F-1030009	Cylinder head bolt	□□□□□	4	
100	SF188FD-1010001	Exhaust bolt	□□□□□□□□	2	
101	SF188F-1011000	Cylinder head assembly	□□□□□□	1	
102	SF188F-1080001	Air shroud	□□□□□	1	
103	SF188F-1010002	Intake bolt	□□□□□□□□	2	
104	SF188F-1040005	Push rod guide	□□□□□□	1	
105	SF160F-1040010	Rocker arm bolt	□□□□□	2	
106	SF188F-1040001	Rocker arm	□□	2	
107	SF160F-1040012	Rocker arm seat	□□□□	2	
108	SF160F-1040011	Valve clearance adjusting nut	□□□□□□□□□□	2	
109	NHSP LA F5TC	Spark plug	□□□□	1	
110	SF188FD-1130003	Carburetor insulator gasket	□□□□□□□□	1	
111	SF188F-1130001	Carburetor insulator	□□□□□□□	1	
112	SF188FD-1130002	Carburetor gasket	□□□□□□	1	
113	SF188F-1131000	Carburetor	□□□□□□	1	
114	SF188F-1130100	Air cleaner gasket	□□□□□□□□□□	1	
115	SF190F-1030008	Cylinder gasket	□□□□□	1	
116	SF188F-1030013	Cylinder gasket Dowel pin	□□□□□□□□	2	

Gasoline Engine Parts List

Ref . No.	Part No.	Description		Qty .	Note
117	SF188F-1122000	T.C.I. Unit	□□□□□	1	
118	GB5789-86	Screw M6x29	□□M6X29	2	
119	GB5789-86	Flange boltM6×29	□□	2	
120	SF188F-1123000	Electrifg coil	□□□□□□	1	
121	SF188F-1030002	Wire flat	□□□□	1	
122	SF188F-1125000	Start motor	□□□□□□	1	
123	GB5789-86	Flange boltM8×35	□□	2	
124	SF188F-1126000	relay	□□□□□	1	
125	GB29.2-88	Flange boltM5×20	□□	2	
	GB93-87	Spring gasket	□□	2	