



7.4 Oil level check.

Test method:

- Check the oil level

REMEDY

To change the engine oil use the special manual pump (Fig. 27 Ref 4).

It is recommended to drain the oil when it is still sufficiently warm to flow easily.

The level must always be between the MAX and MIN notches on the dipstick (Fig.27 Ref. 2).

Oil sump capacity:

IS 2.5 lt 1,1

7.5 Engine oil filter engine.

Test method:

- Check the oil filter condition.

REMEDY

- Remove the screw (fig.27, rif.5).
- Remove the filter (fig.27, rif.6).
- Wash with diesel fuel and dry with compressed air.